

How STO works

- The STO inputs disable the drive output so that the motor cannot produce torque. - The function is used for the safe stopping of the machine in an emergency. - The STO can be triggered by a manual emergency stop or by a safety control system. - For the wiring and the safety parameters, refer to the connection page and the safety documentation.

From:

<https://www.nilab.at/dokuwiki/> - **NiLAB GmbH**
Knowledgebase

Permanent link:

https://www.nilab.at/dokuwiki/doku.php?id=en:epulse:sto_inputs

Last update: **2026/09/11 07:54**

