

Servo Drive Label

The **servo drive label** is laser-marked on the bottom of the drive and identifies the delivered unit. It carries the key data needed for identification, commissioning, and spare-part ordering.

The label reports the following information:

Item
Model name
Serial number S/N#
Rated Voltage
Rated Current and Peak Current
CE marking and country of origin

Here an example:



How to use the label

- Quote the **model name** and the **serial number** when ordering spare parts or requesting support. - Verify that the rated voltage and current on the label match the application. - The CE marking confirms conformity; keep the label visible for inspection.

From:

<https://www.nilab.at/dokuwiki/> - NiLAB GmbH
Knowledgebase

Permanent link:

https://www.nilab.at/dokuwiki/doku.php?id=en:epulse50_dc_servodrive:label

Last update: **2026/09/11 07:53**

