

How to use connectors

How to use speedtec connector


The standard connection system based on speedtec connector on the cable must be used with the right alignment before pushing it inside the connector on the motor side. **Please use the marker on the two connectors to avoid permanent damage to the inside parts of the connector on the motor side. (see photo below)**

Power Side




Video


Signal Side

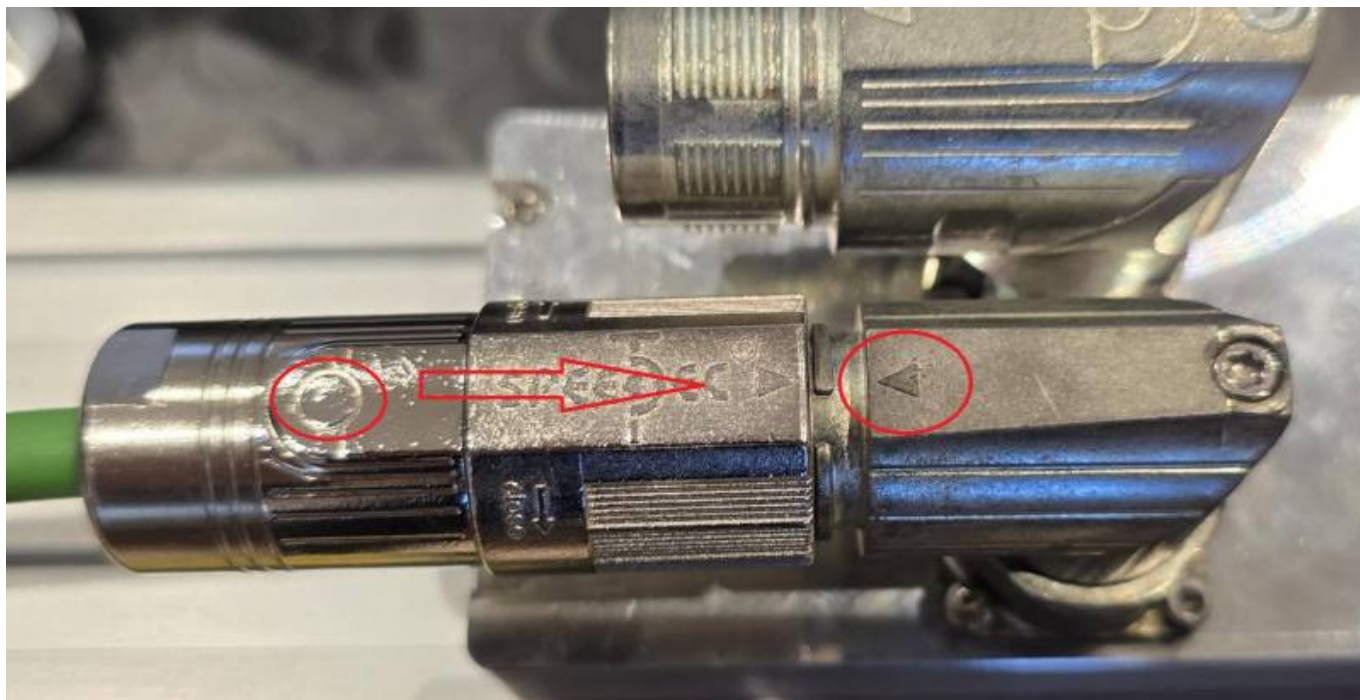


PLEASE DO NOT INSERT THE CONNECTOR IF THE ALIGNMENT IS WRONG. IF YOU FORCE THE CONNECTOR IN, YOU WILL DAMAGE THE INTERNAL PIN HOLDER AND THE ENCODER FEEDBACK WILL STOP TO HAVE A CONNECTION TO THE DRIVE !!!!

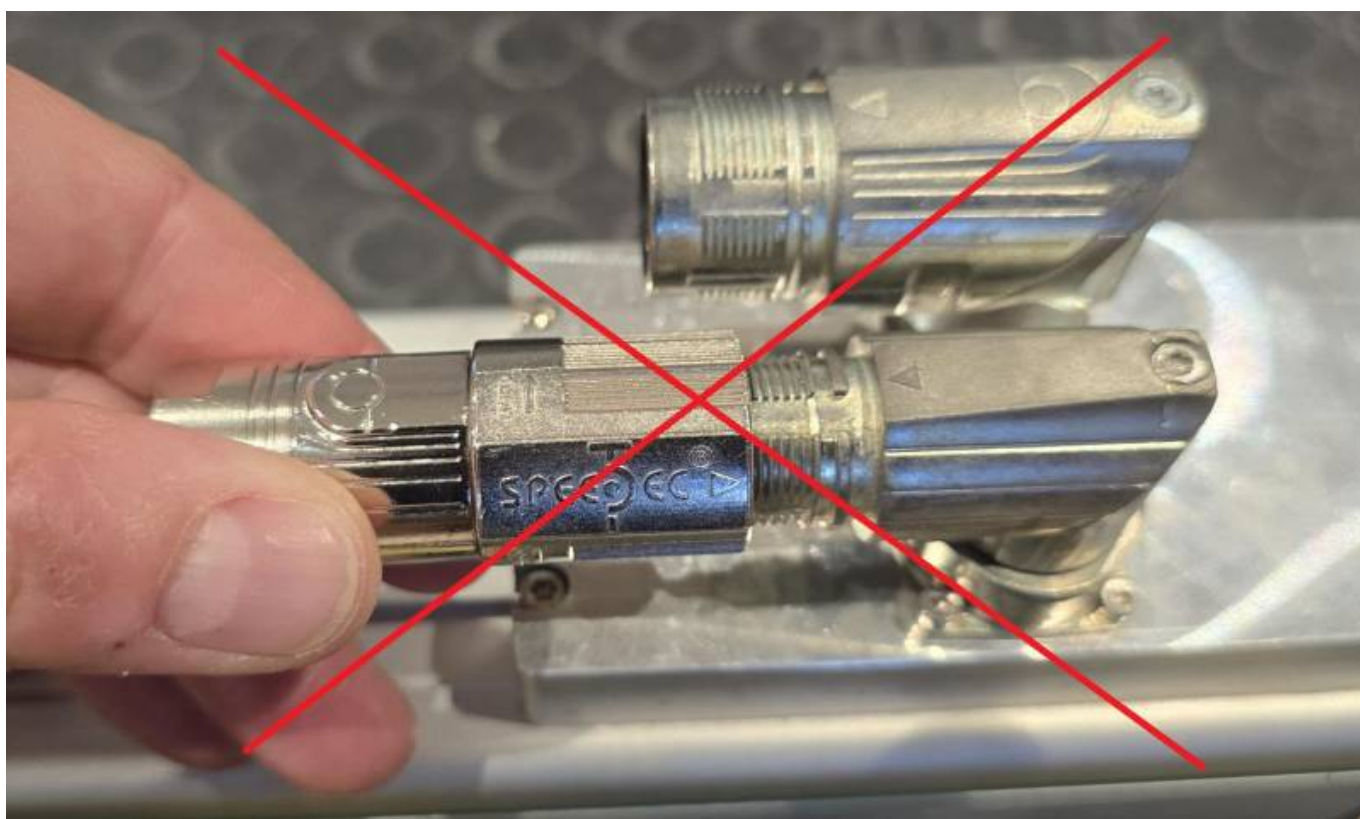


How to see if the insert is damaged or not

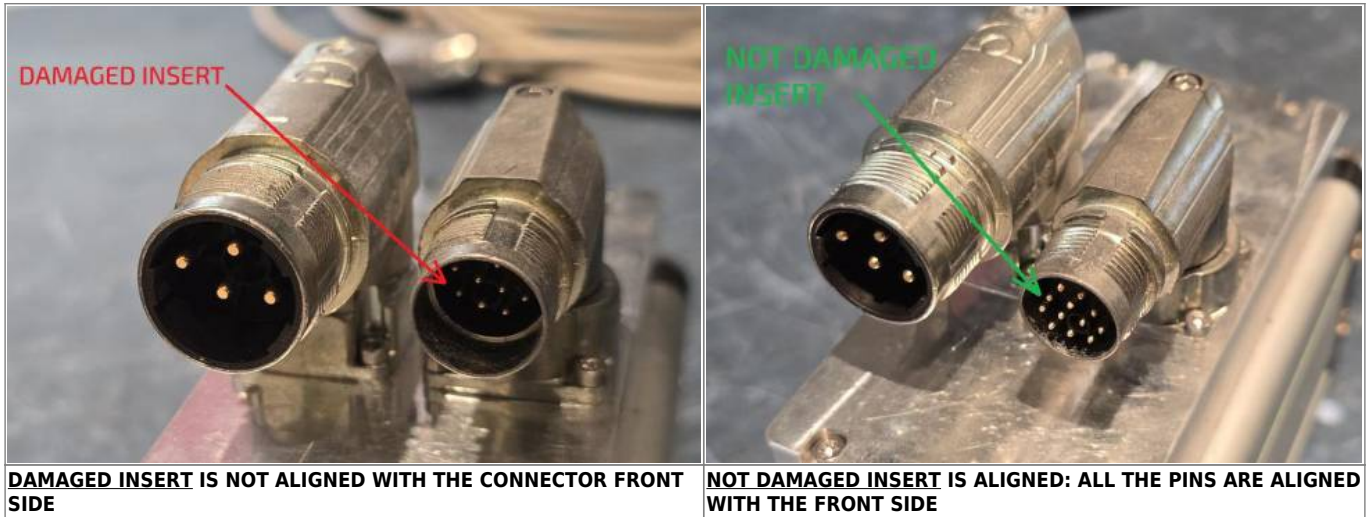

How to use standard connector

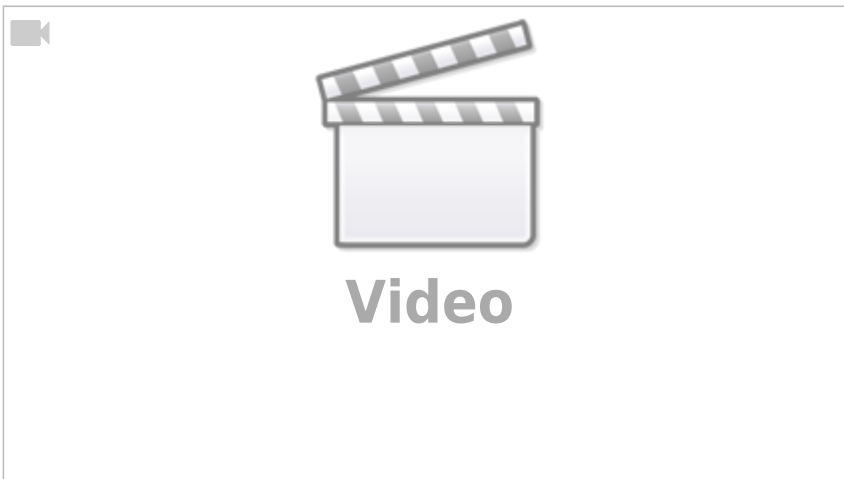

How to rotate the connector

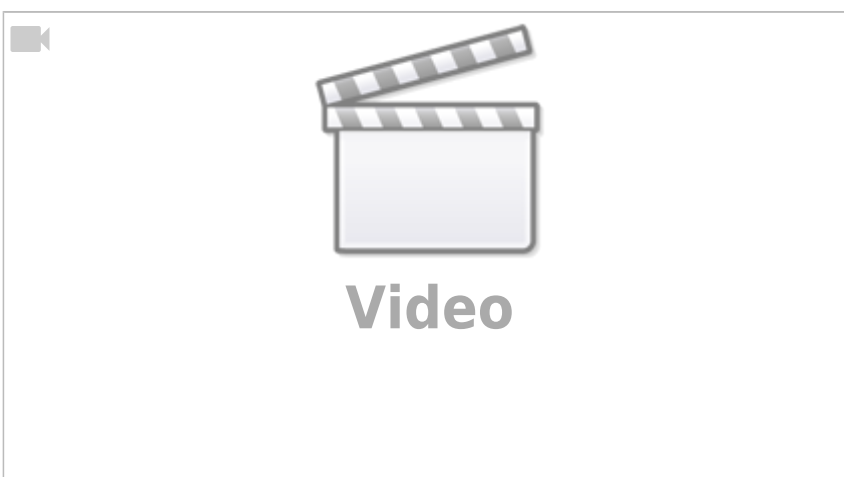

Last
update:
2026/09/11 07:55 en:green_drive_motors:how_to_connectors https://www.nilab.at/dokuwiki/doku.php?id=en:green_drive_motors:how_to_connectors

From:
<https://www.nilab.at/dokuwiki/> - **NiLAB GmbH**
Knowledgebase

Permanent link:
https://www.nilab.at/dokuwiki/doku.php?id=en:green_drive_motors:how_to_connectors

Last update: **2026/09/11 07:55**

