



Connectors

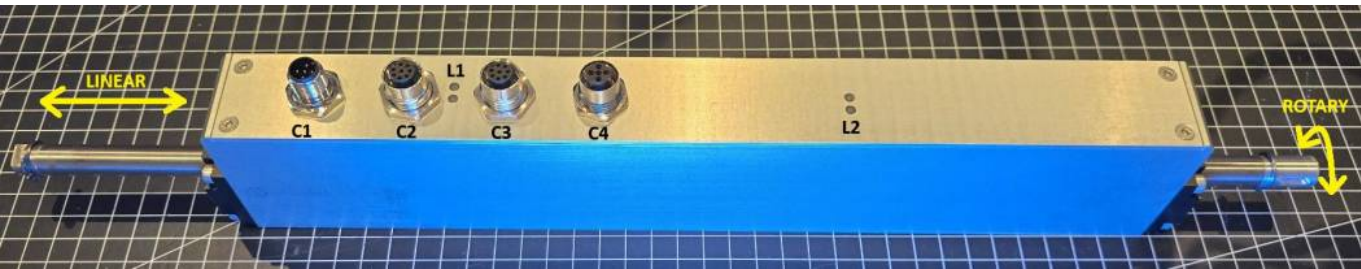

This page describes the **connectors** of the NLiR120Q roto-linear motor.

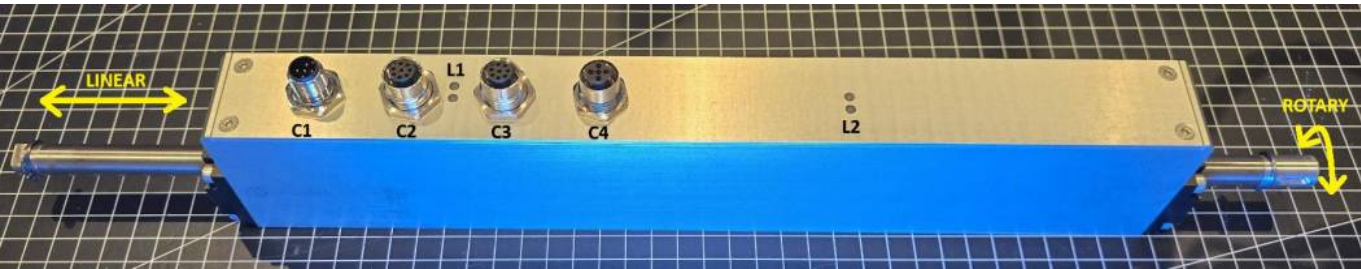

The roto-linear motor has 3 x M12 connectors (standard version) and 4 x M12 connectors (CANopen version).
L1 and L2 are the status LEDs for the linear and rotary motor.

Connector	Function	Type
C1	Power connector	M12, 5 poles male
C2	Signal connector for linear side	M12, 8 poles female
C3	Signal connector for rotary side	M12, 8 poles female
C4	CANopen connector	M12, 5 poles female

For the pinout of the connectors on the relative cable, please see:
https://www.nilab.at/dokuwiki/doku.php?id=integrated_drive_motors:connection_system

Connection notes

- The standard version has 3 connectors (C1, C2, C3); the CANopen version adds C4. - **C1** is the power connector, **C2** the linear-side signal, **C3** the rotary-side signal. - **L1** and **L2** show the status of the linear and rotary axis. - Use the correct mating connectors and cable types as listed in the accessories page; verify the pinout before connecting.

From:
<https://www.nilab.at/dokuwiki/> - NiLAB GmbH Knowledgebase

Permanent link:
https://www.nilab.at/dokuwiki/doku.php?id=en:integrated_rotolinear:connections

Last update: 2026/09/12 14:37



NiLAB GmbH Knowledgebase - <https://www.nilab.at/dokuwiki/>

