


Installation

This page shows the **installation** of the NLiR120Q roto-linear motor. It illustrates the fixing points and the load coupling for the rotary side.


NLiR120Q-100-1 Fixing points

The illustration below shows the fixing points of the NLiR120Q-100-1 version.

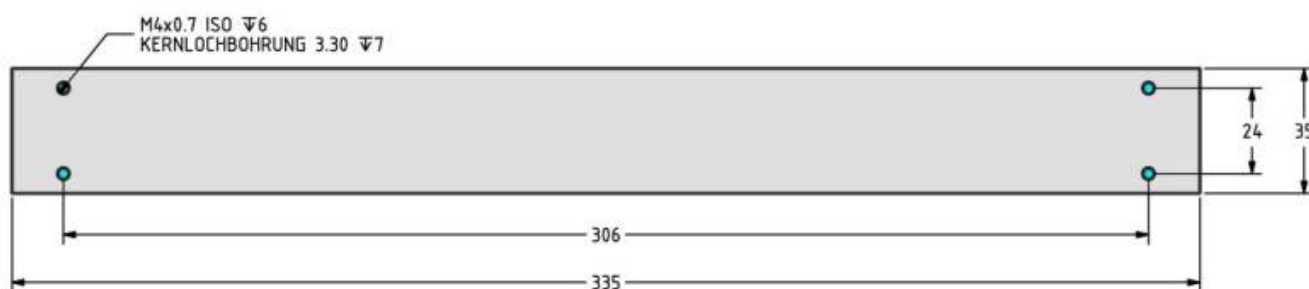


NLiR120Q-100-2 Fixing points

The illustration below shows the fixing points of the NLiR120Q-100-2 version.

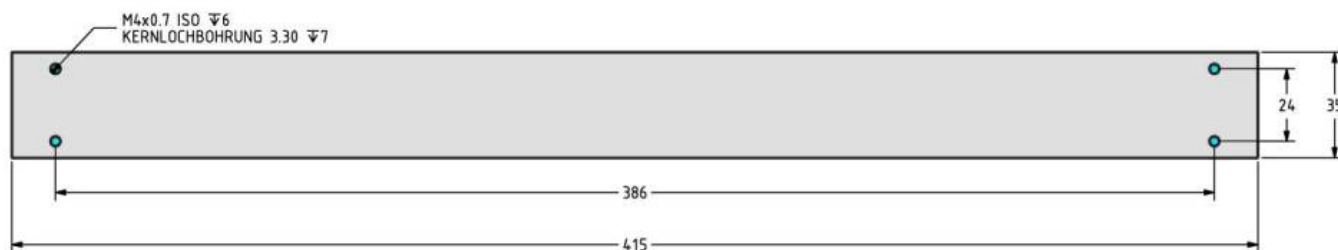

Load coupling on the rotary side

The illustration below shows the load coupling arrangement on the rotary side.

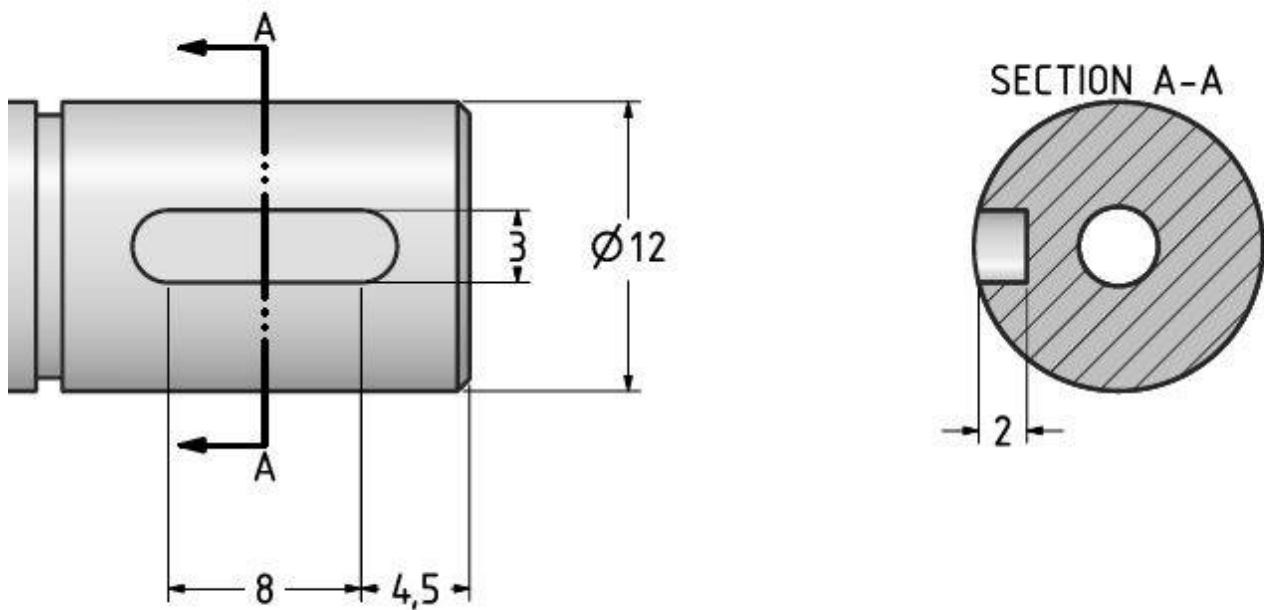

Installation notes

- Use the fixing points shown for the respective motor version.
- Mount the motor on a flat, rigid surface and align the rotary axis.
- Respect the coupling alignment and the allowable misalignment on the rotary side.
- Ensure free rotation and adequate clearance for the connectors and the cable.

From:

<https://www.nilab.at/dokuwiki/> - **NiLAB GmbH Knowledgebase**

Permanent link:

https://www.nilab.at/dokuwiki/doku.php?id=en:integrated_rotolinear:installation

Last update: **2026/09/12 14:37**

