

Accessories - Mounting set

This page shows the **mounting set accessories** for the LM linear axes.

Clips

The clips are used for fixing and routing the cables along the axis.




Pneumatic brake

The pneumatic brake holds the axis in position when the motor is not powered.



Flanges

The flanges are used for the mounting of the axis and the connection of the load.

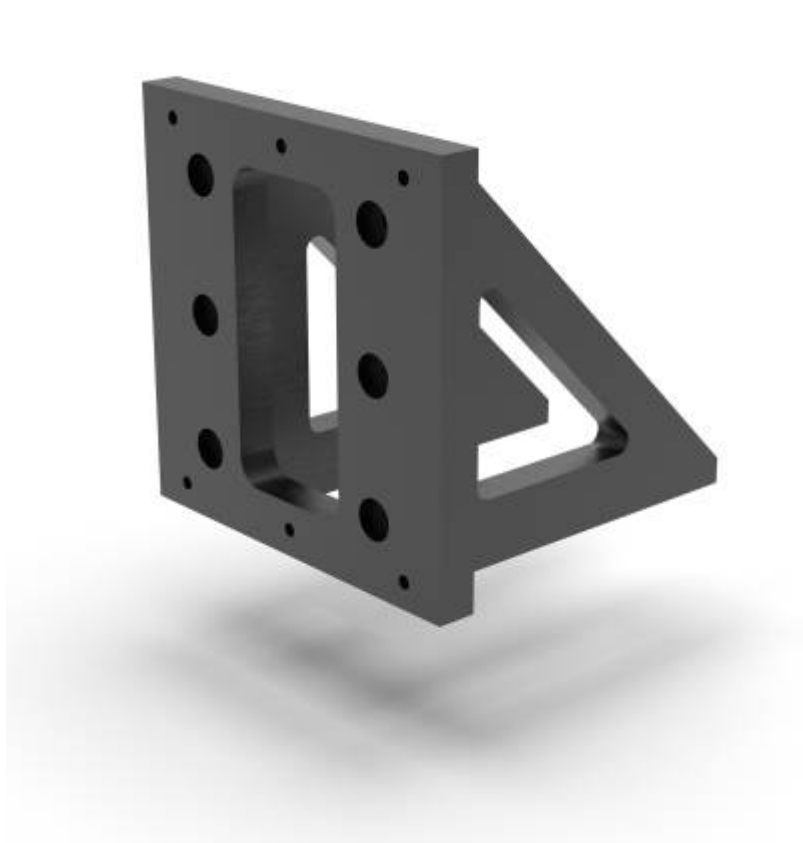

Notes

- Use the clips for cable routing and fixing. - Use the pneumatic brake for holding the axis in position. - Use the flanges for the mounting of the axis and the load connection. - Refer to the mounting examples page for the typical configurations.

From:

<https://www.nilab.at/dokuwiki/> - **NiLAB GmbH**
Knowledgebase

Permanent link:

https://www.nilab.at/dokuwiki/doku.php?id=en:lm_linear_axes:accessories

Last update: **2026/09/11 07:57**

