



Accessories for mounting

This page shows the **mounting accessories** of the Maglift. The flanges are used to fix the magnetic spring to the slider and to the stator.


Maglift 12/17/22 - Flange for slider

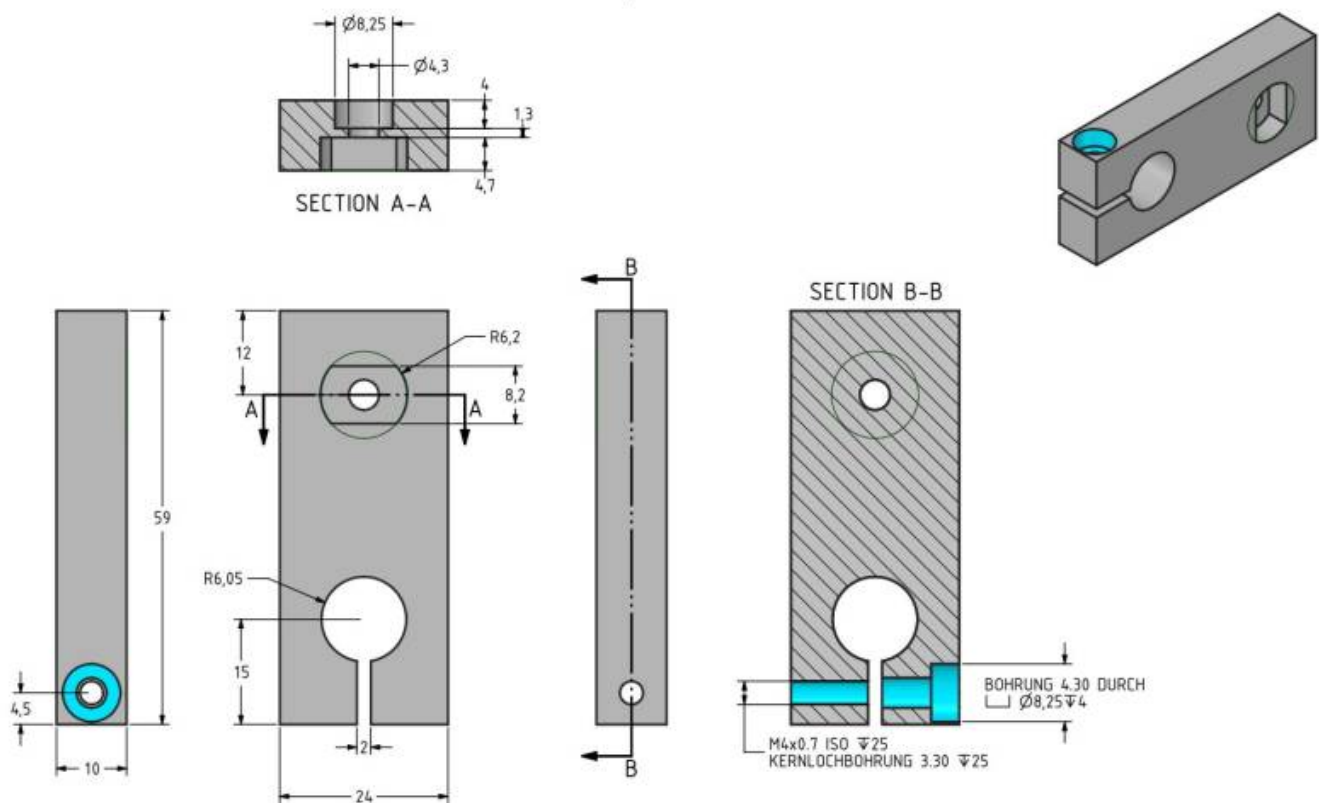


Maglift 12/17/22 - Flange for stator

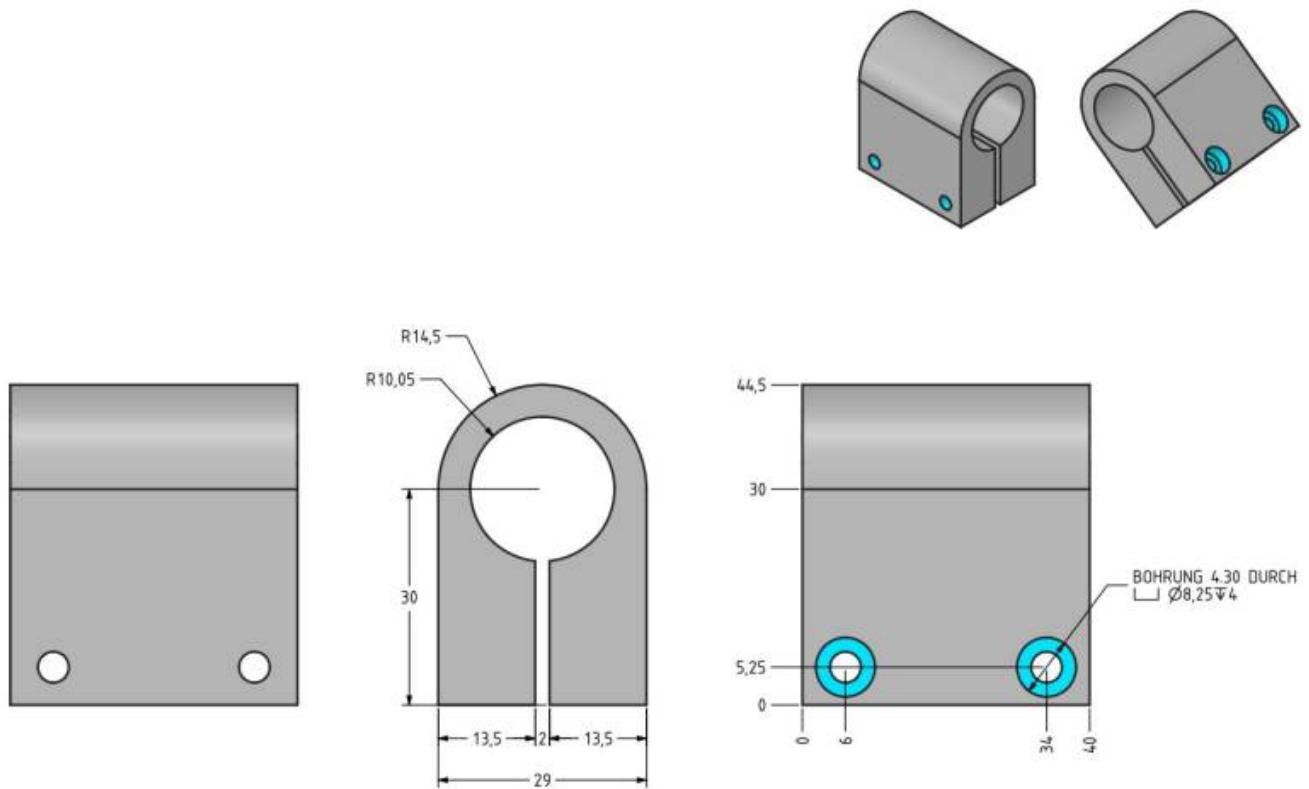

Maglift 40/50/60 - Flange for slider

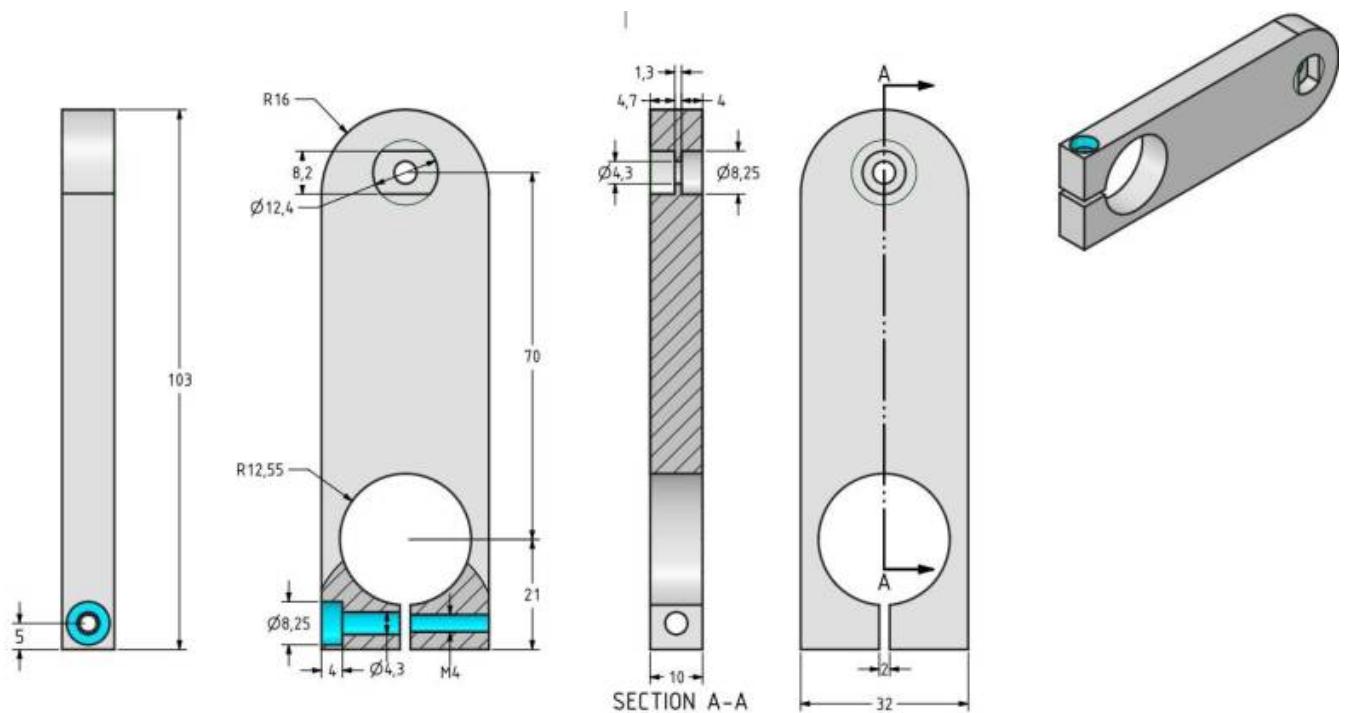

Maglift 40/50/60 - Flange for stator

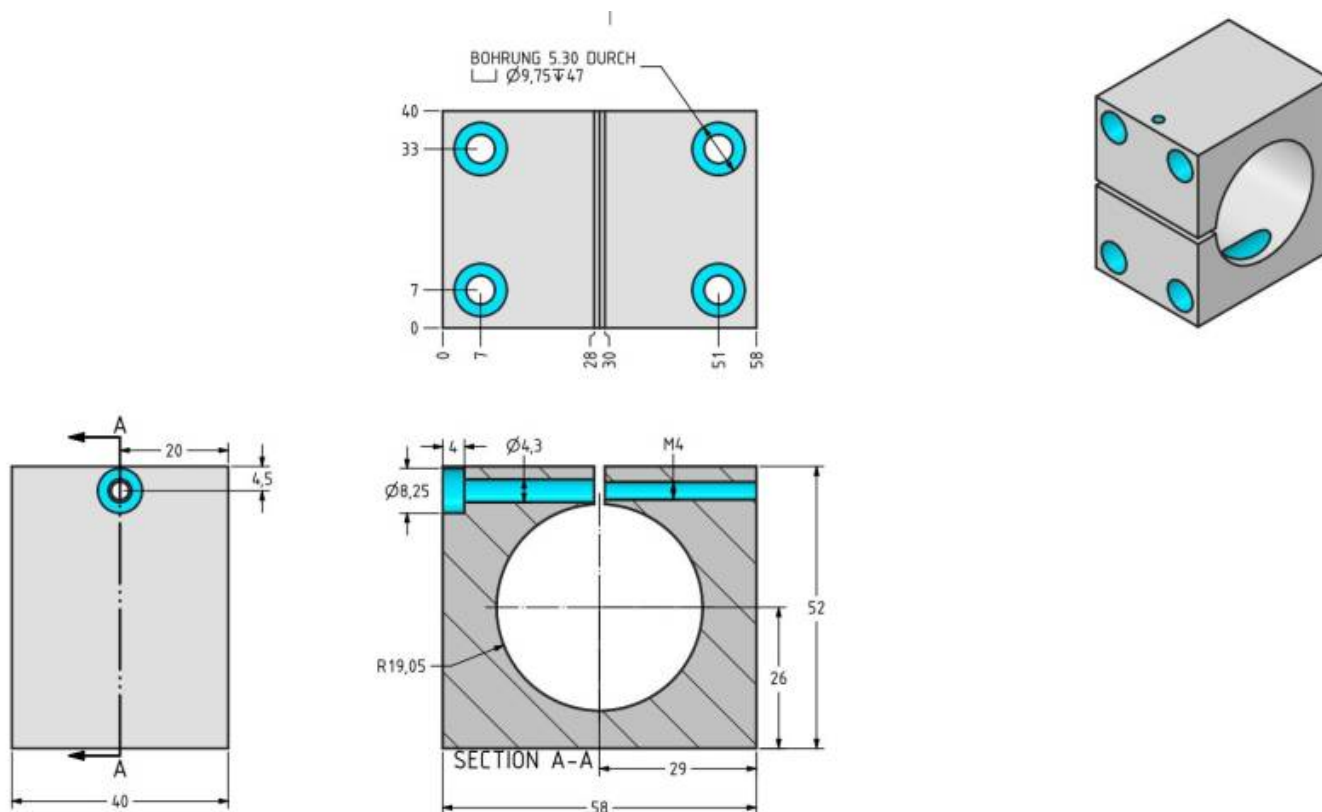

Notes

- Use the flange for the slider on the moving part and the flange for the stator on the fixed part. - The flanges are matched to the Maglift size (12/17/22 and 40/50/60). - Follow the mounting procedure for the correct alignment and clearance. - Refer to the start page and the dimensions page for the overall dimensions.

From:

<https://www.nilab.at/dokuwiki/> - **NiLAB GmbH Knowledgebase**

Permanent link:

https://www.nilab.at/dokuwiki/doku.php?id=en:maglift:mouting_flange

Last update: **2026/09/11 07:57**

