

Parameter dictionary

This page gives access to the complete parameter dictionary of the NL7 servo drive. The parameters define the drive behaviour: the motion profile, the control loop gains, the feedback scaling, the protection settings, and the communication configuration.

A full list of the servo drive parameters is available in this document: [:nl7_servo:nl7_parameters.pdf](#)

How to use the parameter list

- The parameters are grouped by function; use the index to find the parameter you need. - Read and write the parameters through the commissioning software or the supported fieldbus interface. - Default values are shown in the document; verify the setting against the application before commissioning. - When in doubt about a parameter, contact the technical support team or consult the commissioning manual.

From:

<https://www.nilab.at/dokuwiki/> - **NiLAB GmbH**
Knowledgebase

Permanent link:

https://www.nilab.at/dokuwiki/doku.php?id=en:nl7_servo:parameter

Last update: **2026/09/11 07:58**

