



Wiring Diagram

How to fix wire cables into connector

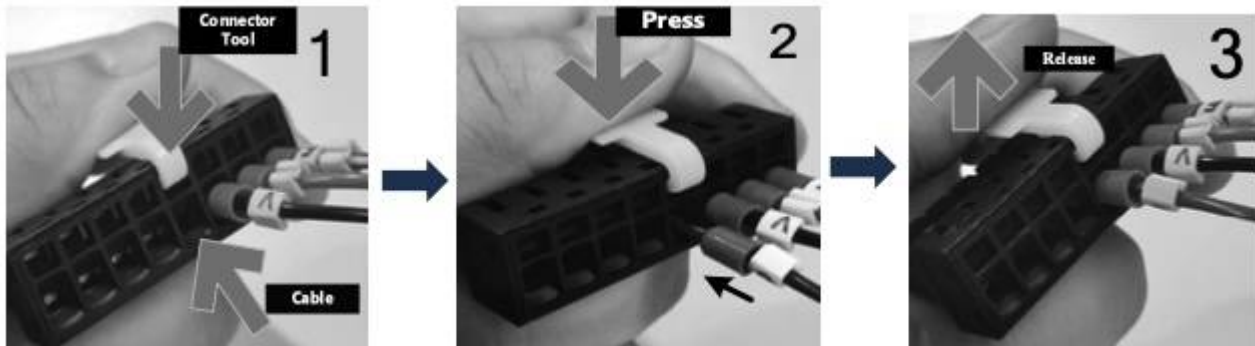

230VAC Version

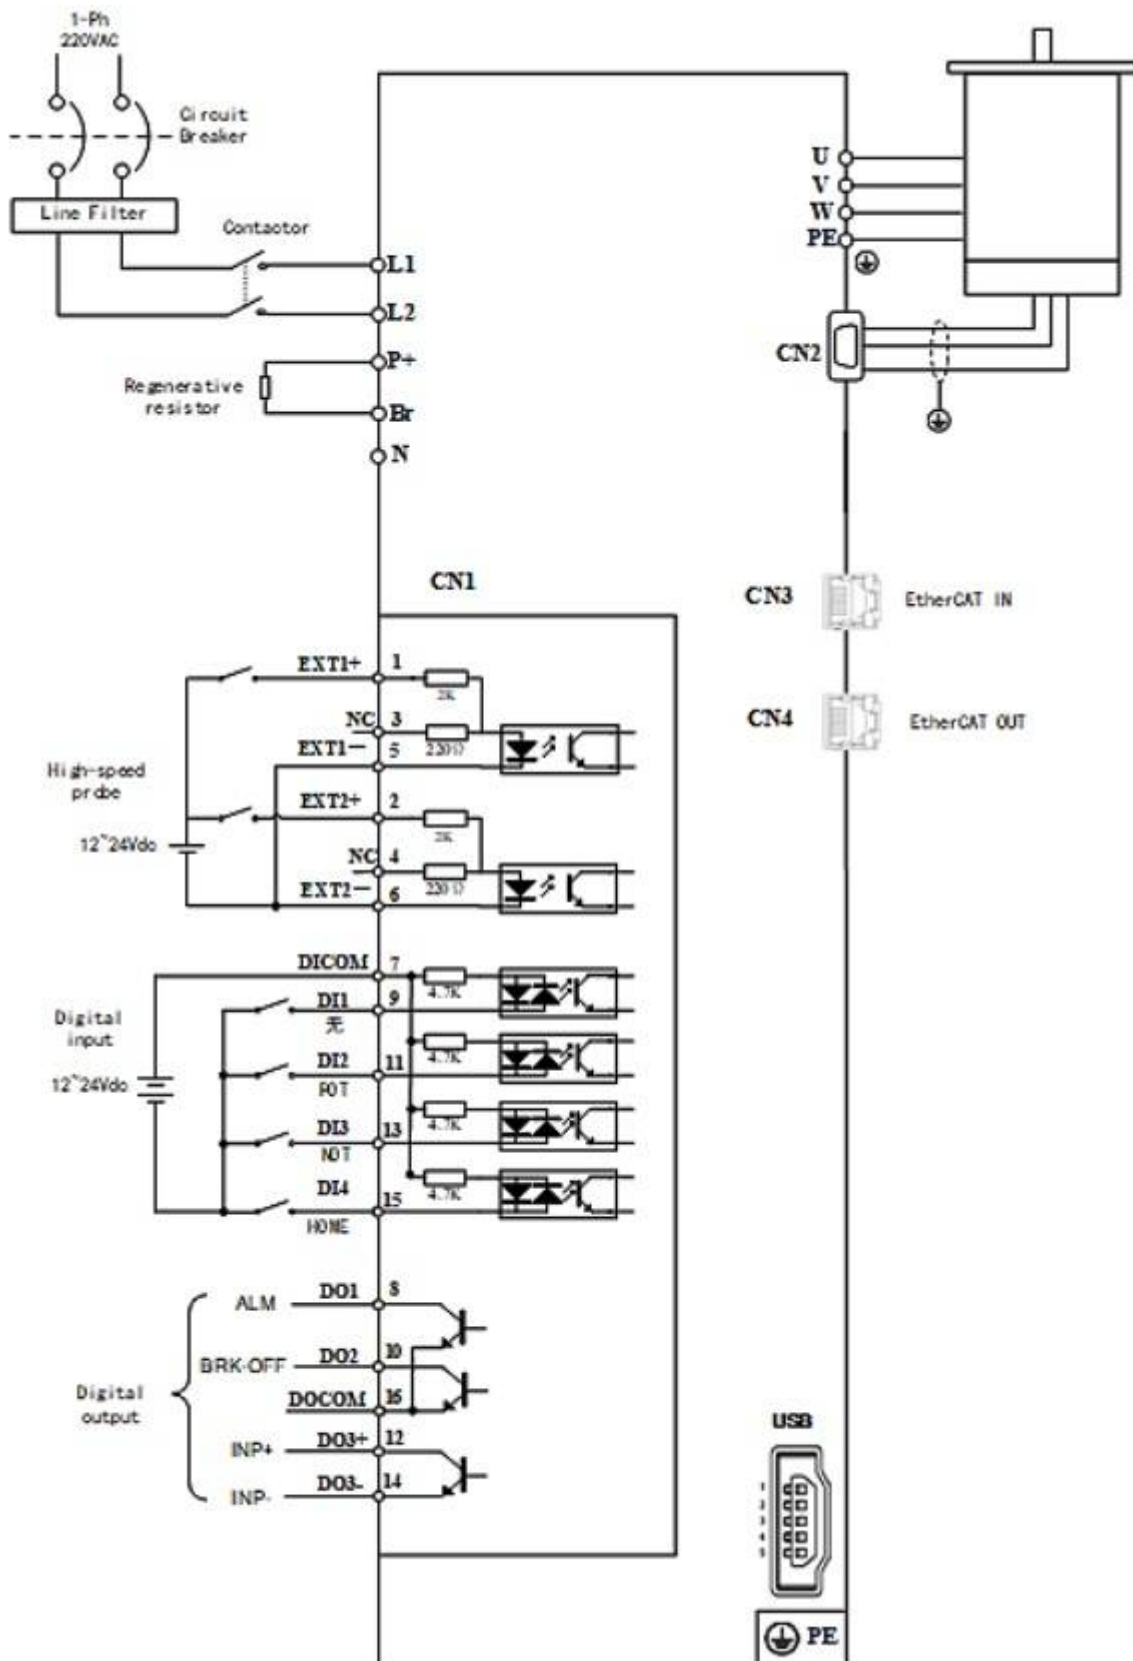

NL7-RS series servo drive supports single phase and three phase 220VAC. Only driver with power rating above 1500W supports three phase 220VAC.


Item

Please use a circuit breaker for the main power supply to prevent damage to the product or machine.

Please do not use a contactor in connection to servo motor as it may not withstand a sudden surge of operating voltage.

Please take note of the capacity when connect to a 24VDC switching power supply, especially if power supply is shared between multiple components. Insufficient supply current will cause failure in holding brake functions.

380VAC Version

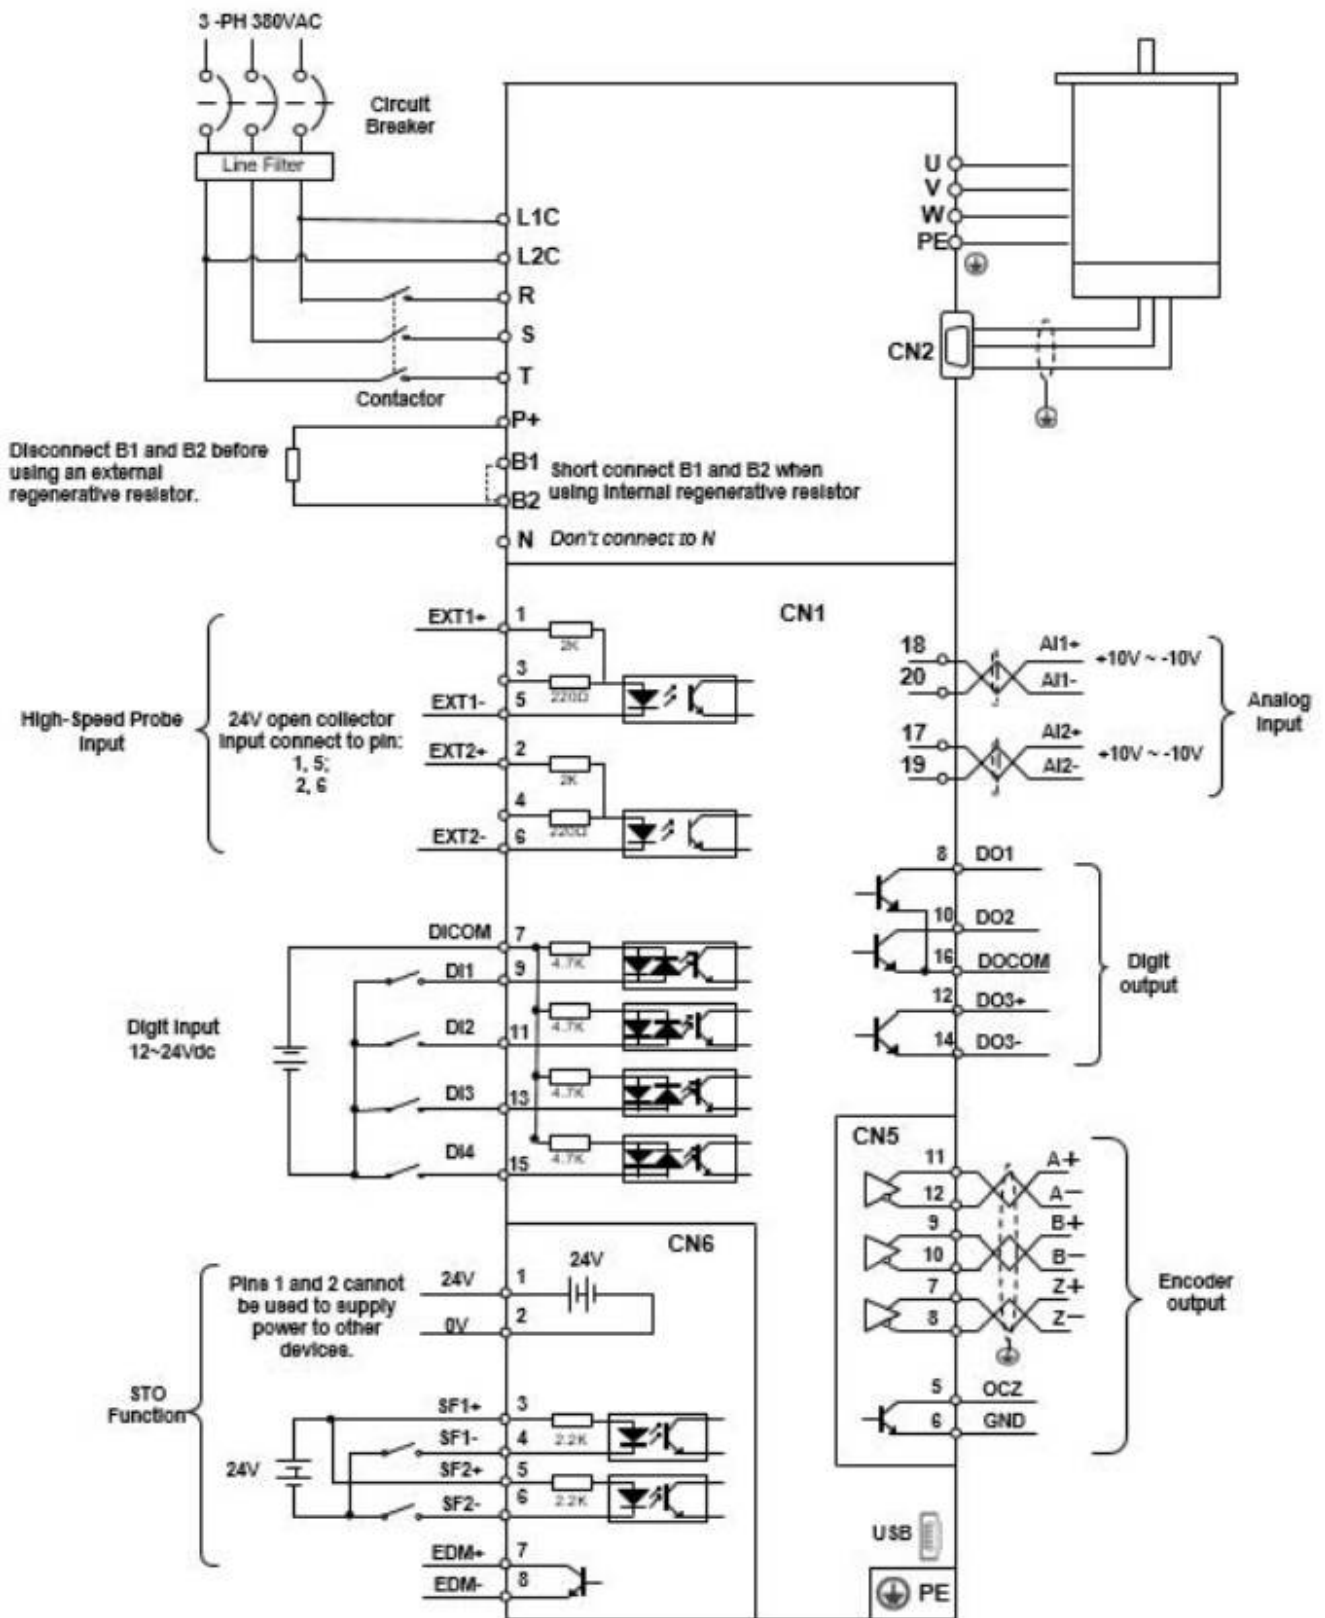

Item

Please use a circuit breaker for the main power supply to prevent damage to the product or machine.
Please do not use a contactor in connection to servo motor as it may not withstand a sudden surge of operating voltage.

Please take note of the capacity when connect to a 24VDC switching power supply, especially if power supply is shared between multiple components. Insufficient supply current will cause failure in holding brake functions.

From:

<https://www.nilab.at/dokuwiki/> - **NiLAB GmbH**

Knowledgebase

Permanent link:

https://www.nilab.at/dokuwiki/doku.php?id=en:nl7_servo:wiring

Last update: **2026/09/11 07:58**

