



Wire connection

This page shows the **wire connection** of the NL-EB15 safety device. The device supports both PNP and NPN output types; the illustration below shows the wiring for each.

PNP type

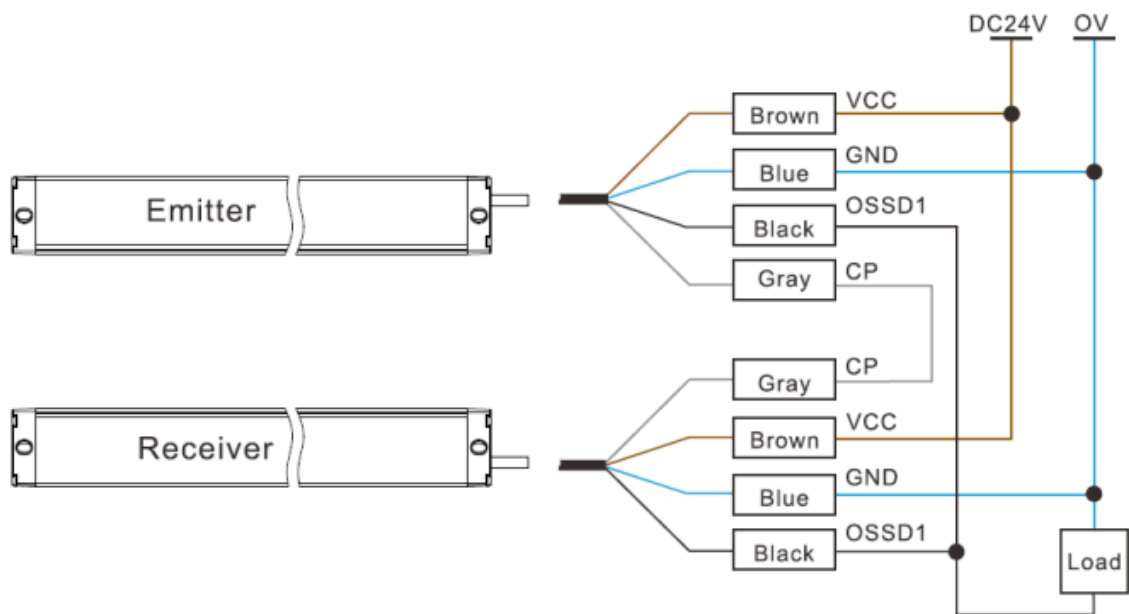

NPN type

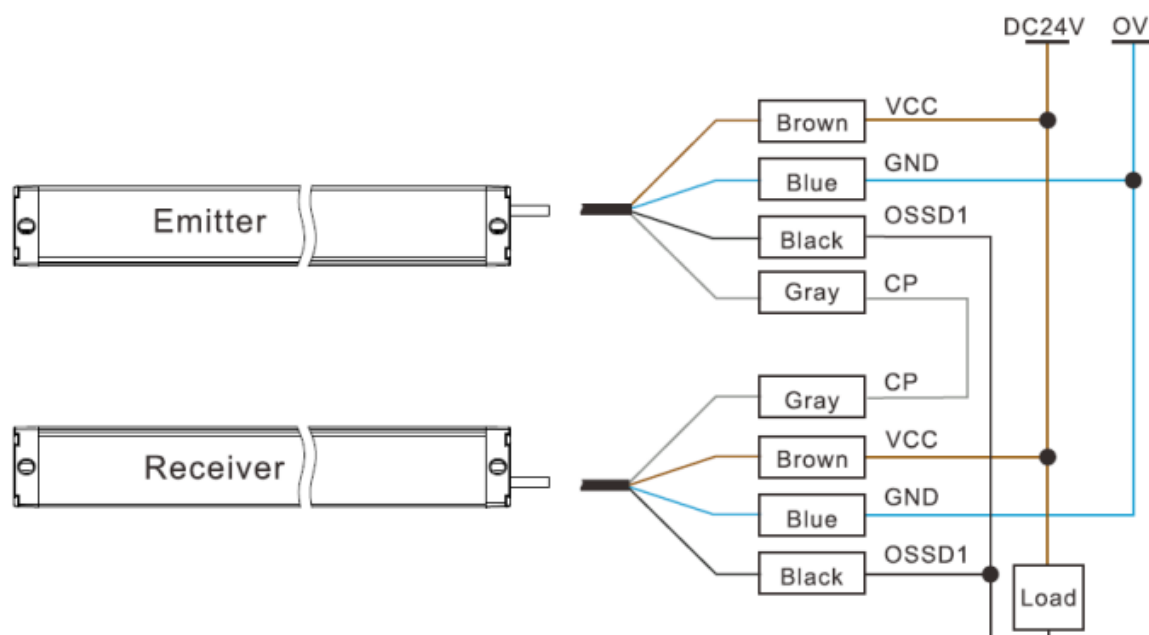

Wiring notes

- **PNP output:** the output switches the positive supply to the load (active high). - **NPN output:** the output switches the load to ground (active low). - Select the output type according to the PLC input and the wiring scheme. - Verify the supply voltage and the load current; refer to the technical parameters page.

From:

<https://www.nilab.at/dokuwiki/> - NiLAB GmbH
Knowledgebase

Permanent link:

https://www.nilab.at/dokuwiki/doku.php?id=en:nl_eb15_safety:connections

Last update: 2026/09/11 07:59

