

Encoder Configurator


This page describes the **Encoder Configurator** software. It is used for calibration, monitoring, and checking of the Reverso encoder from a Windows PC.

The Encoder Configurator is a software running on Windows for calibration, monitoring, and checking of the Reverso encoder.

The communication between the PC and the encoder is based on an RS485 communication interface, using a programming cable from NILAB.

Download here:

<https://www.nilab.at/download/revenc368-firmware-09092020-flash-tool/?wpdmdl=3804&refresh=670f811cac1011729069340>

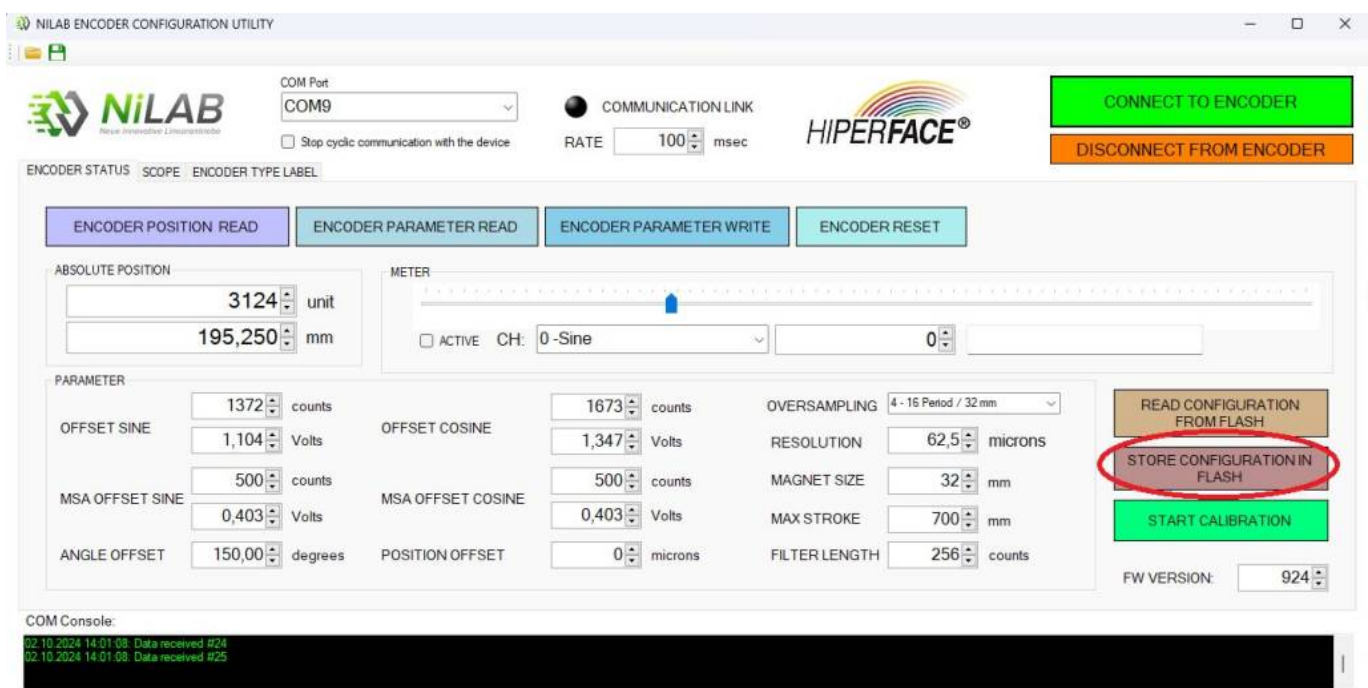

What the Encoder Configurator is used for

- **Calibration:** set the SIN/COS period and the absolute position parameters. - **Monitoring:** check the encoder signals and the operating status. - **Checking:** verify the encoder configuration and the communication.

How to proceed

- Connect the encoder to the PC with the NILAB programming cable (RS485). - Start the Encoder Configurator and select the connected encoder. - Set the desired SIN/COS period and the resolution, and store the configuration. - Verify the communication and the encoder output after the configuration.

From:
<https://www.nilab.at/dokuwiki/> - **NiLAB GmbH**
Knowledgebase

Permanent link:
https://www.nilab.at/dokuwiki/doku.php?id=en:reverso_encoder:encoder_config

Last update: **2026/09/11 07:59**

