


# Ports

## Lower-side

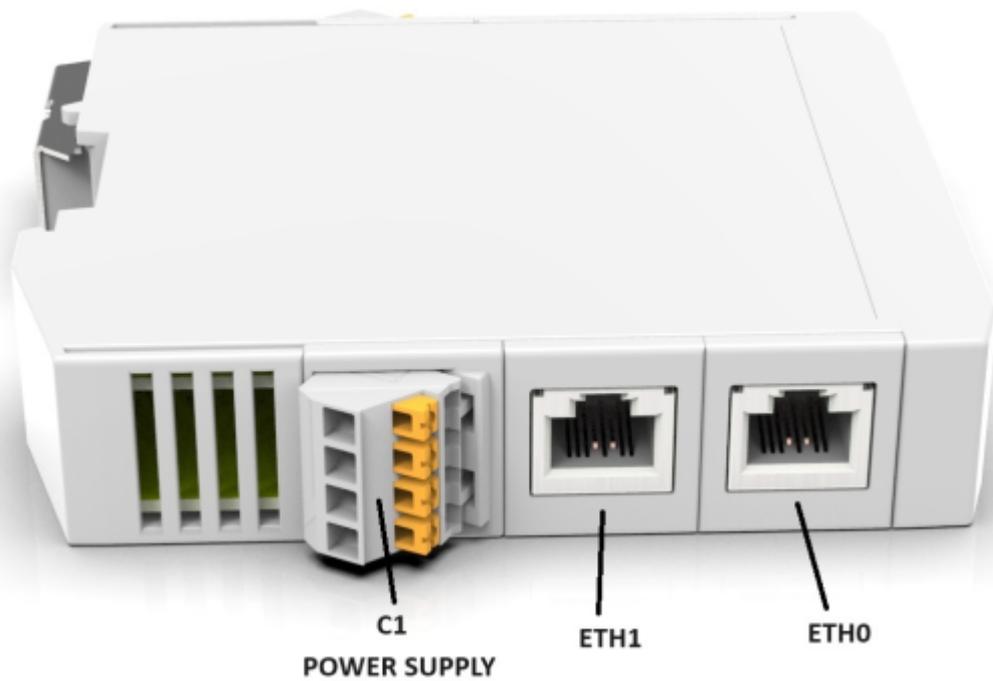


## C1 Connector

Pin	Description
1	24VDC
2	GND
3	24VDC
4	GND

**ETH0 - PORT IN / ETH1 - PORT OUT**

## Upper-side

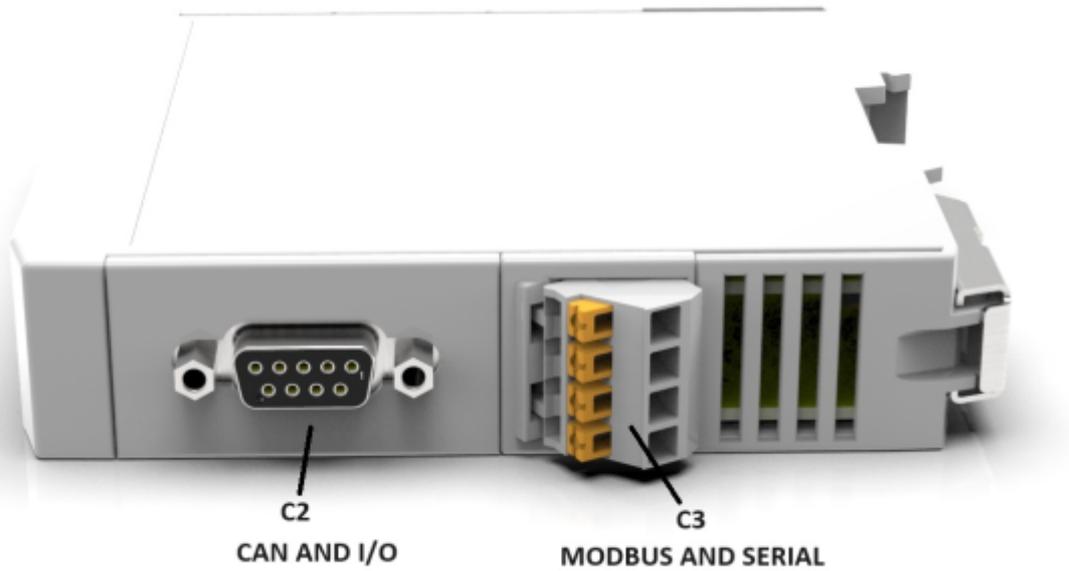

### C2 Connector - DSUB9 Male

Pin	Description
1	DIG_IN1
2	CAN_L
3	GND
4	DIG_OUT1
5	DIG_OUT2
6	DIG_IN2
7	CAN_H
8	DIG_IN3
9	DIG_OUT3

### C3 MODBUS and Serial COM

Pin	Description
1	MODBUS B
2	MODBUS A
3	-
4	-

Please, use the USB to UART3V3 cable to connect the gateway with configuration software

From:  
<https://www.nilab.at/dokuwiki/> - NiLAB GmbH  
Knowledgebase

Permanent link:  
[https://www.nilab.at/dokuwiki/doku.php?id=gtw\\_ethercat:ports](https://www.nilab.at/dokuwiki/doku.php?id=gtw_ethercat:ports)

Last update: 2024/04/24 05:40



