

Rules for the use of the product

Transport

In order to not damage or avoid a product failure is required to follow the following rules:

- The transport must be made by qualified personnel and in original packaging.
- Avoid shocks or excessive pressure on the packaging

During transport the temperature must be between $-20\text{ }^{\circ}\text{C}$ and $+75\text{ }^{\circ}\text{C}$,

max.rate of change $20\text{ }^{\circ}\text{C} / \text{h}$

- Relative humidity max. 95%, noncondensing
- Avoid electrostatic discharge. Discharge its electrostatic charge before handling the servo amplifier; avoid contact with highly insulating materials as plastic materials or synthetic fabrics; place the servo amplifier on a conductive surface.
- In case of visible damage to the packaging, check the unit for visible damage and notify the shipper and the manufacturer.

Storage

- Only the original manufacturer's packaging
- Storage temperature $-20\text{ }^{\circ}\text{C}$ $+75\text{ }^{\circ}\text{C}$
- Storage relative humidity max. 95%, noncondensing

From:

<https://www.nilab.at/dokuwiki/> - **NiLAB GmbH**
Knowledgebase

Permanent link:

https://www.nilab.at/dokuwiki/doku.php?id=mbd_servo_drive:rules

Last update: **2023/09/21 07:16**

