


Encoder Configurator

Encoder Configurator is a software running on windows for calibration, monitoring and checking of the reverso encoder.

The communication from PC and encoder is based on RS485 communication interface using a programming cable from NiLAB.

Download here:

<https://www.nilab.at/download/revenc368-firmware-09092020-flash-tool/?wpdmdl=3804&refresh=670f811cac1011729069340>

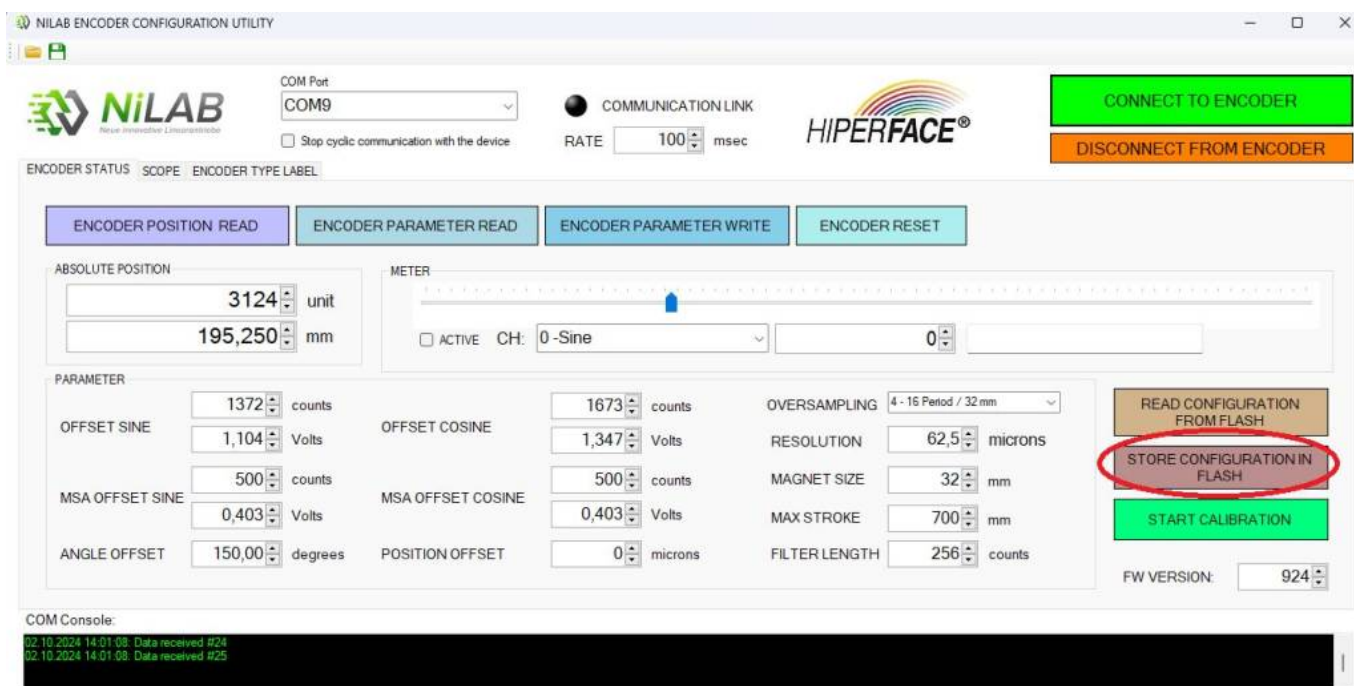

From:

<https://www.nilab.at/dokuwiki/> - **NiLAB GmbH Knowledgebase**

Permanent link:

https://www.nilab.at/dokuwiki/doku.php?id=reverso_encoder:encoder_config

Last update: **2024/10/16 09:04**

