
Interface description

Overview

Item
Communication Port (example: COM2, COM3,..)
Button to establish a communication with the motor
Button to download the configuration from the interface to the motor
Button to upload the configuration from the motor to the interface
Progress bar that indicates the percentage of download or upload procedure
Motor type detected (ex: NLi120Q or NLi080Q)
Field to insert the password for expert mode
Current slave ID
Drive status and buttons for switch on and off, fault reset and homing procedure
Status of digital inputs and outputs
Status of motor axis (position, speed and current)
Windows selection (motion, controller, scope, motor parameter, communication, diagnostic, espert and survelliance)
Motion table window

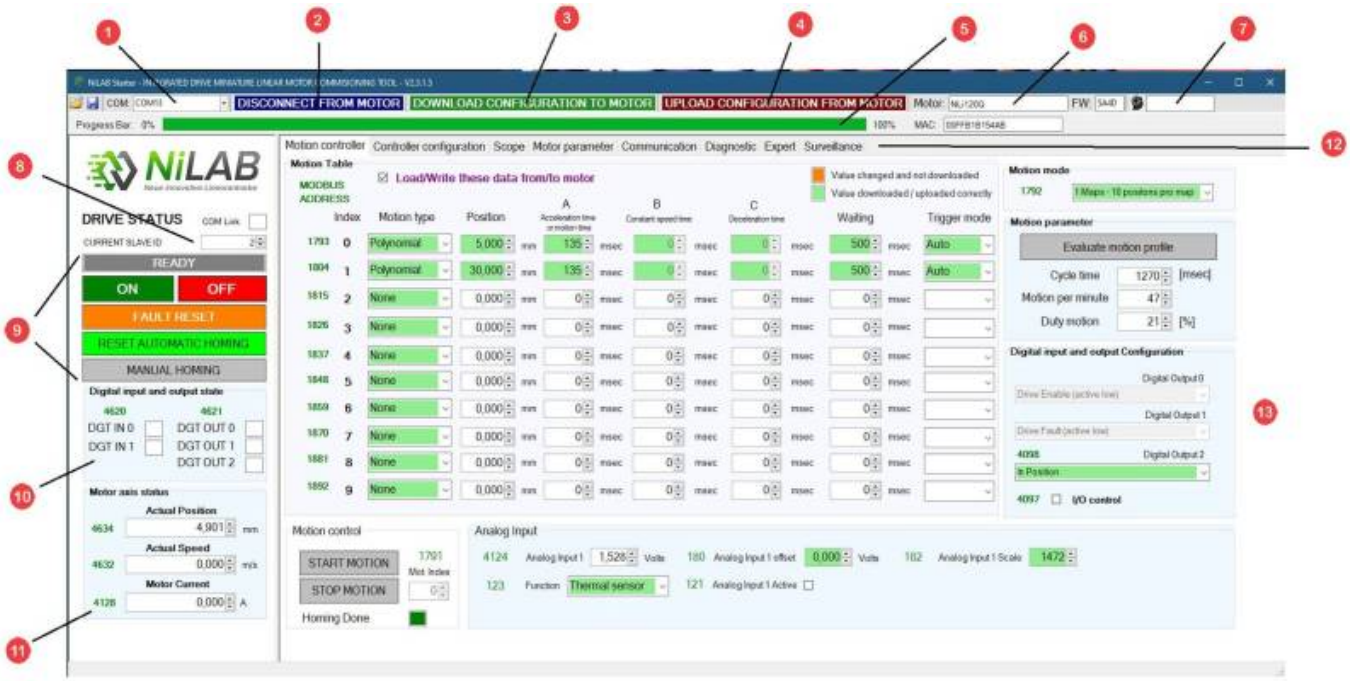


How to download and store the current interface data

The user can connect to the motor using differernt COM ports, downloading and uploading the data stored inside the intergated drive motor memory.

Any change regarding the numbers inside the configuration windows requires to press the download to the motor button to update the configuration inside the memory of the motor. When some parameters change, the color will change to orange to underline which numer has to be downloaded

inside the motor. After the download the color of the parameters must always be green. **PLEASE IN ORDER TO STORE PERMANENTLY THE CONFIGURATION - PRESS THE WRITE CONFIGURATION TO FLASH**

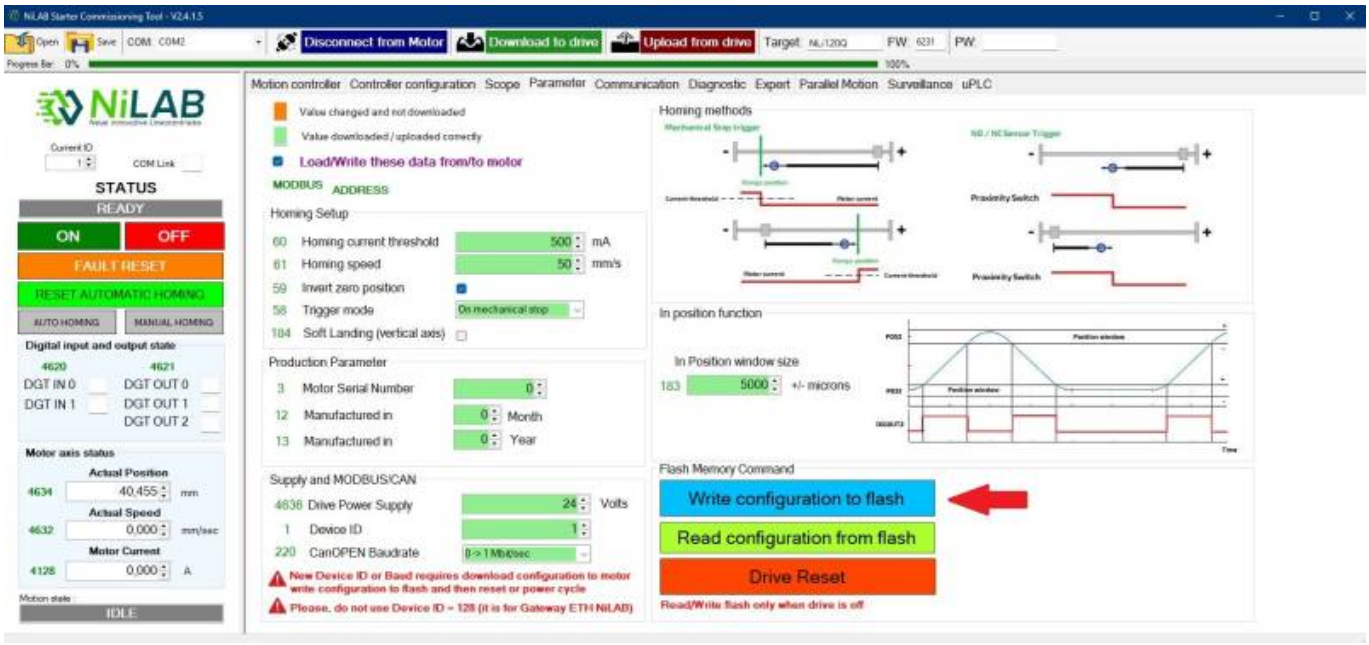

From:
https://www.nilab.at/dokuwiki/ - **NiLAB GmbH Knowledgebase**

Permanent link:
https://www.nilab.at/dokuwiki/doku.php?id=en:nilab_starter:interface

Last update: **2026/09/11 07:58**