

Control Signals

Signal overview and timing


As explain in the [connections description](#), one signal called TRIGGER SIGNAL from PLC or Sensor is used to start the motion sequence of the pick and place. This signal must have a period compatible with the total motion time of the pick and place cycle.

Here below one example considering a pick and place speed of 0.6 sec total pick and place time corresponds to 100 pick and place per minutes. The Master sync signal is generated by the master (motor 1) with a small delay (debouncing) of 3 msec after the detection of the rising edge of the Trigger Signal (DIgital Input 1 - Pin 9). This signal is generated for 4 times and it is the motion trigger of the slave (motor 2). The motion task of the motor 2 (slave) is performed at every rising edge of the Master sync received. In position signal is the confirmation of the motion due to the motor 2 (slave). When the In position level is low the motor has reached the position window. In position window tolerance is defined using the parameter 183 (dec). This parameter is present in the Motot parameter window of the [NiLAB Starter software](#).



Enable and Disable signal

The Digital IN0 (Enable / Disable) signal must be switched only when the Trigger signal is low !

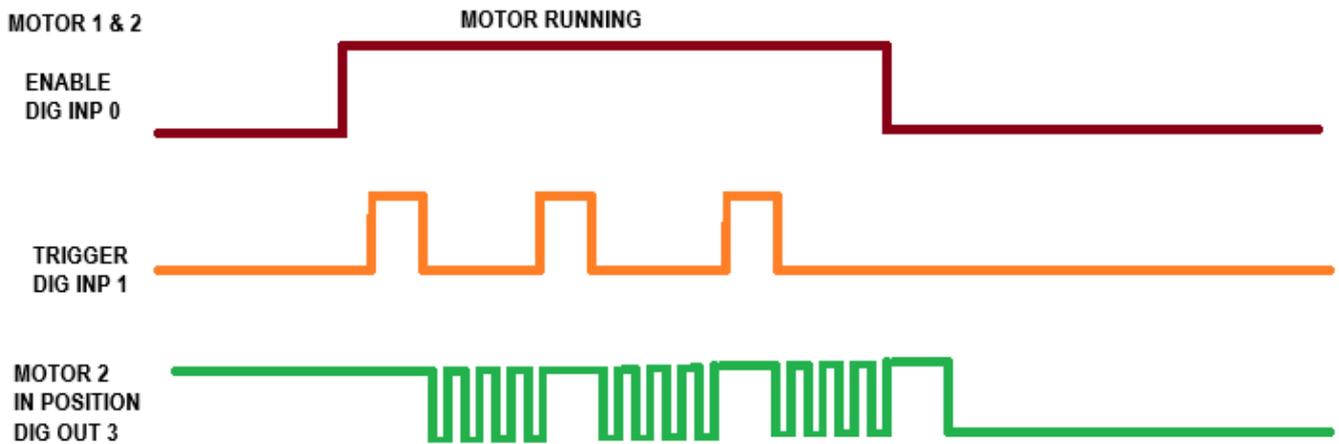

At every Disable, Digital Input 0 low the two motors executes Automatic Homing to reach the parking position.

This function is call Soft Landing and it is enabled by the parameter 184. The corrent sequence of validated by the Motor 2 Digital Output 3 set to In position function. After every Auto Homing the Motor 2 in position must be LOW.

Please, at every disable waiting that the two motors complete the auto homing function waiting 3 secs or looking to the motor state using MODBUS RTU communication. The motor status must be Ready (Status word register 0x1200 value must be 1). During the automatic homing this register is set to 3.

Product deviator Example of motion task configuration using NiLAB Starter

MOTOR 1 - Master

Motion Table		<input checked="" type="checkbox"/> Load/Write these data from/to motor							Value changed and not downloaded		Value downloaded / uploaded correctly	
MODBUS ADDRESS	Index	Motion type	Position	A	B	C	Waiting	Trigger mode				
				Acceleration time or motion time	Constant speed time	Deceleration time						
1793	0	Polynomial	60,000 mm	150 msec	0 msec	0 msec	6 msec	DIG IN risir				
1804	1	Polynomial	160,000 mm	150 msec	0 msec	0 msec	6 msec	Auto				
1815	2	Polynomial	130,000 mm	150 msec	0 msec	70 msec	6 msec	Auto				
1826	3	Polynomial	30,000 mm	150 msec	0 msec	0 msec	6 msec	Auto				

MOTOR 2 - Slave

Motion Table

Load/Write these data from/to motor

Value changed and not downloaded
Value downloaded / uploaded correctly

MODBUS ADDRESS	Index	Motion type	Position	A Acceleration time or motion time	B Constant speed time	C Deceleration time	Waiting	Trigger mode
1793	0	Polynomial	30,000	150 msec	0 msec	0 msec	5 msec	DIG IN rising
1804	1	Polynomial	130,000	150 msec	0 msec	0 msec	5 msec	DIG IN rising
1815	2	Polynomial	160,000	150 msec	0 msec	70 msec	5 msec	DIG IN rising
1826	3	Polynomial	60,000	150 msec	0 msec	0 msec	5 msec	DIG IN rising

From:
<https://www.nilab.at/dokuwiki/> - NiLAB GmbH
Knowledgebase

Permanent link:
https://www.nilab.at/dokuwiki/doku.php?id=integrated_pick_and_place:control_signal

Last update: 2024/03/04 14:14

